

Black Metal Fence U-Channel Sets

Setting & Fitting Guide

The only dip-coated all-metal U-channel system manufactured in North America, engineered to resist rust, scratches, salt, and UV better than the rest. Galvanized steel with a matte-black dip-coat adds maximum rigidity and load capacity to privacy fences, with slotted mounting points for easy alignment with our steel posts. Available in 48", 60", 72", 84", and 96" lengths and infill up to 1" or 1.5" thick, so the channel handles your panel weight and thickness for a clean, con

This product

Sizes	Up to 1" · Up to 1.5"
Options	Up to 1" · Up to 1.5"
Configurations	10
Example SKU	MFUCK-4x8-UPTO1

Receiving and handling

- Your panels were manufactured to precise standards and stacked straight out of the machine into a clean, organized bundle, then loaded by forklift. That minimises scratches in production and transit.
- **Lift sheets straight up — never slide them across one another.** A panel edge acts like a key and will cut through paint or finish on the sheet below.
- Take only a few sheets at a time, one person on each side. Edges are sharp: wear work or garden gloves.
- Each stack ships with a protective top and bottom sheet. They are sacrificial — discard them once you have unloaded.

What you will need

- | | |
|--|--|
| <ul style="list-style-type: none">• Post hole digger or auger• Tape measure and string line• Level | <ul style="list-style-type: none">• Drill with metal bits• Concrete mix• Work gloves |
|--|--|

Working out your posts

Post length	Panel height + 3 ft, rounded up to the stocked ladder — 6 ft, 9 ft or 12 ft.
How many	One post per section, plus one end post to close each run, plus one more for every gate.
Hole depth	About 3 ft for a 6 ft fence. Go deeper if your local frost line requires it — check your municipality.
Concrete	Fill while holding spacing and alignment. Brace the posts and let the concrete cure 24–48 hours before hanging anything.

Specific to this product

Wire opening: Up to 1" · Up to 1.5"	The opening you chose decides what the fence contains. Smaller openings hold smaller animals and children but catch more wind — on an exposed site a tighter mesh puts noticeably more load into your posts, so do not skimp on post depth.
Set both channels before you load a panel	Get both vertical channels plumb, parallel and correctly spaced first. A panel dropped into channels that are out of parallel will bind at one end and sit proud at the other.

Installing this product

- 1 Work out the count first**

One post per section, plus one end post to close the run, plus one per gate. Ordering by section alone always leaves you one short.
- 2 Pick the length**

Post length is panel height plus 3 ft, rounded up to 6, 9 or 12 ft. A 6 ft fence takes a 9 ft post.
- 3 Dig and set**

Roughly 3 ft deep for a 6 ft fence, deeper at the frost line. Plumb to the string line, concrete, brace, cure 24–48 hours.
- 4 Fit track and channel**

Fasten U-channel to the inside face through the pre-drilled holes. Check both sides are plumb and the spacing matches your panel before fixing the second one.
- 5 Finish**

Fit caps and toppers last, once the run is square and the concrete has fully cured.

Before you call it done

- Every bolt fully tightened.

- Panels snug in their channels with no rattle.
- Frame square, plumb and level.
- Consistent reveal between panel and post along the whole run.

Cutting, drilling and sealing

Every cut and every drilled hole exposes bare steel. How you make that cut, and what you do to it afterwards, is what decides whether the edge lasts as long as the panel.

DO

- **Cut cold.** Tin snips, a nibbler, or a circular saw fitted with a fine-tooth carbide metal-cutting blade. These shear the steel without heating it.
- **Cut with the finished face down** when using a saw, so the burr forms on the back and the visible face stays clean.
- **Support the sheet close to the cut** so it cannot flex and distort the profile.
- **Drill, do not punch.** Use a sharp metal bit at moderate speed and deburr the hole afterwards.

NEVER

- **Never an abrasive wheel, chop saw or angle grinder with a cutting disc.** The heat burns the zinc and paint back from the edge — rust will start at that cut and travel.
- **Never cut over other panels.** Hot filings land on the finish and embed, and every one becomes a rust freckle.
- **Never leave swarf on a panel.** Sweep filings off immediately, before they sit in dew overnight.

SEALING THE CUT EDGE

Galvanized / dip-coated steel and wire	Touch the cut edge with a zinc-rich cold-galvanizing compound. The galvanizing protects a small exposed edge sacrificially, but a cut end or a snipped wire deserves the touch-up.
HDP-painted panels and sheet	Deburr, then apply matched touch-up paint to the cut edge. Two thin coats beat one thick one.
Corten weathering steel	Leave it. Corten is designed to rust to a stable protective patina — a cut edge simply joins in. Do not seal or paint it.
316 stainless	Deburr and clean. Avoid contaminating it with carbon-steel filings from another cut — that is what causes surface rust spotting on stainless.

Cut edges that are burnt or left bare are the most common cause of early edge rust, and damage from improper cutting is not a finish defect.

Maintenance and upkeep

These systems are built to be left alone. The upkeep below is what keeps the finish warranty intact — it is not a chore list.

Twice a year	Rinse with a hose. Where road salt, coastal spray or livestock is involved, rinse more often — salt left sitting is what shortens a coated finish.
Cleaning	Mild soap and water with a soft brush or cloth. Rinse it off. Never a pressure washer at close range, never an abrasive pad, never a solvent or bleach-based cleaner — all of them cut the finish.
Scratches	Touch up promptly with matched paint or, on galvanized, a zinc-rich compound. A scratch left through a winter becomes an edge rust line.
Fixings	Check bolts and fasteners after the first season and every couple of years after. Ground movement and thermal cycling loosen hardware; a loose panel wears at its contact points.
Vegetation	Keep soil, mulch and dense planting off the panel base. Constant damp against steel is the one condition that beats any coating.

Warranty

BarrierBoss warranties are set **by component**, not by product:

COMPONENT	TERM
Steel, wire and factory finish	40-Year Warranty

Installation is the installer's responsibility. Concrete, hole diameter and depth, frost-line allowance, and setting panels square, plumb and level are down to the installer. Damage from improper installation or from cutting with an abrasive wheel is not covered.

BarrierBoss — made, moved and unloaded by us. Delivered and unloaded on your property.
 Questions about your install? Contact us before you cut, drill or concrete — we would rather answer first.